



mellerware®

E X E C U T I V E
G R A N A D A 1 0 L U R N



complies with
INTERNATIONAL
IEC60355
SAFETY SPECIFICATIONS

m
1500W

CE
2 YEAR
GUARANTEE

Model:
22500

PLEASE READ ALL INSTRUCTIONS BEFORE USE


2 year guarantee





Dear customer,

Many thanks for choosing to purchase a MELLERWARE brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

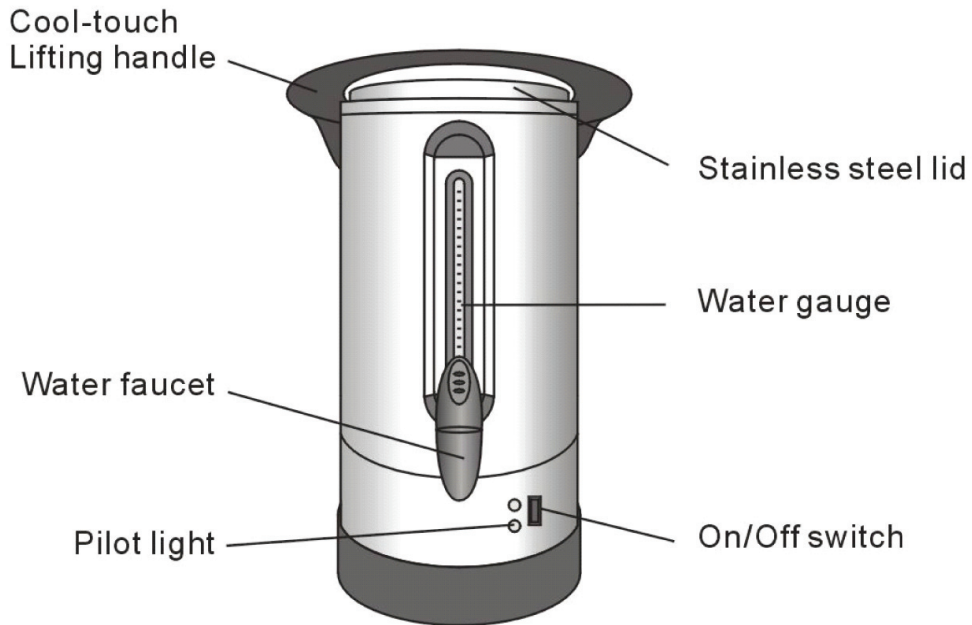

IMPORTANT SAFEGUARDS

It is essential that you read this section first in order to operate the appliance safely.

- Avoid touching the metal parts of the appliance as they become hot during use.
- The appliance must not be immersed.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance outdoors.
- Switch off before unplugging from wall outlet. Unplug from outlet when not in use and before cleaning.
- Allow to completely cool before putting on or taking off any parts, and before cleaning.
- Do not open the lid when water is boiling to avoid scalding by hot steam..
- If the appliance is overfilled,boiling water may be ejected.
- Then appliance should be placed on a firm and





flat surface and away from edges to avoid overturning.

- Never attempt to move the appliance when it is full of hot (or cold) water.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

INSTALLATION

Remove all the packaging materials and tape, as well as any protective plastic from the machine. Clean off any glue residue left over from the protective plastic or adhesive tape. Place the appliance on a flat level surface with the tap facing the user. Before connecting the appliance to the power supply, ensure that the "ON/OFF" switch is set to the "OFF" position.

HOWTOUSE

The appliance is constructed almost entirely of hygienic stainless steel and should give many years

of trouble-free service as long as it is used in accordance with these instructions. Before first use, rinse out the appliance with warm water.

- Fill the water boiler with water take care not to fill past the "FULL" level indicator. Avoid under filling the appliance as this will cause the boil dry protection system to operate and could reduce the life of the element.
- Lock the lid on top of the unit, ensuring the lid is on correctly.
- Connect the urn to the power outlet and switch the unit on. The heating pilot lamp should now light up and the unit will begin to boil the water.
- When the water is boiling, the heating pilot lamp goes out and the keep warm pilot lamp lights up, the urn is in the state of keeping warm.
- In all cases it will be necessary to regularly check the water level to ensure that this unit does not boil dry.
- To turn off the urn, switch OFF and unplug the appliance from the outlet.


BOIL DRY

The water boiler features a boil dry protection system, which will switch off the element if the water level is too low. When boil dry occurs, switch OFF, fill the urn with water to the desired level making sure not to fill above the FULL level then switch the urn on. The heating pilot lamp will light up and the water begin heating again.

CLEANING AND MAINTENANCE

Attention to regular care and maintenance will ensure long and trouble free operation of the appliance. In order to ensure the proper cleaning and to avoid damage to the urn the instructions below should be followed.

- Always keep the urn clean. Occasionally clean the inside of the urn with a non-metallic scourer and soapy water, rinsing so that no residue builds up. Any build-up of crusty deposits can usually be removed by placing on appropriate solution of vinegar and water in the urn and allowing it to soak overnight without turning the urn on. This should then be followed by the usual clean with soapy water and a thorough rinsing.
- The urn should be cleaned at the end of each day using hot soapy water, with the machine turned OFF.
- Wipe down the remainder of the machine with a cloth or sponge that is only damp with soapy hot water, taking care to avoid water entering any part of the unit.

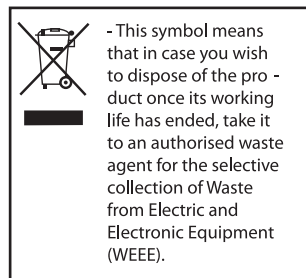

This appliance complies with Directive 2006/95/EC on Low Voltage and Directive 2004/108/EC on Electromagnetic Compatibility.





creative housewares

27 Nourse Avenue Epping 2 Cape Town
PO. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

