



English

Dear customer,

Thank you for choosing to purchase a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

#### REGISTER YOUR MELLERWARE WARRANTY

You thank for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

#### FIRST YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

#### SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return the product to Mellerware for repair or replacement. The product free of charge should it be found to have a fault. Please refer to your warranty for more information. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

**NB:** Registration should be completed at [www.creativehousewares.co.za](http://www.creativehousewares.co.za).

Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

#### THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge if it is found to have a fault. Please refer to your warranty for more information. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

**NB:** Registration should be completed at [www.creativehousewares.co.za](http://www.creativehousewares.co.za). Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration.

Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

**Repair out of the warranty period:**

If service or repair becomes necessary outside the warranty period, this service is still available however all transport/postage, spares and labour costs will be for the customers' account. All chargeable repairs will require the customers' written acceptance of the quote. Once the go-ahead has been received Mellerware will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received. All repairs carry a warranty of 3 months from the date of the repair.

**For any service, enquiries and complaints, please contact our Customer Care on 086 111 5006, e-mail [help@chwsa.co.za](mailto:help@chwsa.co.za) or WhatsApp on +27 63 014 0457 from 08h00 to 15h00 Monday to Friday excluding public holidays.**

Please also note that the company is normally closed for 2 weeks around Christmas and New Year.

Please send all products to one of the listed service centres.

**Notes:**

1. The online warranty system is a safe storage facility for your receipt.

2. You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.

3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.

4. All instructions on how to load your products are available inside your profile.

5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.

6. For assistance with registration please email: [help@chwsa.co.za](mailto:help@chwsa.co.za)

## ONLINE WARRANTY REGISTRATION

#### WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 years warranty.

#### ADDED BENEFITS

In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:

- Discount voucher on product warranty registration
- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments - be the first to get the latest appliances
- Special offers on promotional items

## How to Register your Online Warranty?



DESKTOP/  
LAPTOP



SMART PHONE/  
TABLET



#### Notes:

1. Open your internet browser and visit [www.mellerware.co.za](http://www.mellerware.co.za)

2. Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.

3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.

4. All instructions on how to load your products are available inside your profile.

5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.

 
6. For assistance with registration please email: [help@chwsa.co.za](mailto:help@chwsa.co.za)

National Service Centre: 086 111 5006  
e-mail: [help@chwsa.co.za](mailto:help@chwsa.co.za)  
[www.creativehousewares.co.za](http://www.creativehousewares.co.za)



creative housewares  
20 Tekstiel Street, Parow, Cape Town, 7493, RSA  
PO Box 6156, Parow East, 7501, RSA  
+27 21 931 8117 | +27 63 014 0457  
+27 86 111 5006 | [www.creativehousewares.co.za](http://www.creativehousewares.co.za)  
+27 11 392 5652

Johannesburg  
25 & 26 San Croy Office Park  
Agora Road, Croydon, 1619, RSA  
complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

Model:  
35830WH  
45W



  complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS



#### Before returning your product, check the following:

- Your household mains supply socket is in good condition, working and switched on.
- The mains supply circuit is not overloaded (white trip switch on your DB Board is off).
- You have read the trouble shooting guide in your Instructions for Use.
- All accessories and parts are present.

#### The following conditions apply:

1. Please ensure you retain your original receipt as this must be presented when making a claim under the terms of the warranty. It is impossible to determine the warranty period without proof of purchase, so please keep this in a safe place. (NB Your original receipt can be scanned onto the Mellerware website [www.mellerware.co.za](http://www.mellerware.co.za) or Creative Housewares (Pty) Ltd [www.creativehousewares.co.za](http://www.creativehousewares.co.za))
2. If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the warranty void.
3. Upon receipt of your appliance, check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The warranty is void if products are damaged after use, so please do not use a damaged product.
4. Any alteration made to the appliance purchased will void the warranty.
5. Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your warranty void, so please read these instructions carefully to ensure your safety, and to get the most effective use from the product (e.g. removing lime scale, water deposits, insect infestation, oil and grease products).
6. Any abuse, negligent, improper or accidental use or care will render the warranty void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
7. Any attempted repair or replacement of unauthorised parts will render the warranty void, so please contact an authorised service centre or service agent for any service or repair requirements.
8. NB: The warranty on replaced products will be from the original date of purchase and not from when the date replacement was made.
9. All repairs carry a 3 month warranty even if this falls outside of the warranty period.
10. Mellerware will attempt to conduct repairs within reasonable time, this is in line with industry standards but cannot be held responsible or liable for any circumstances not under the brands control.
11. This warranty does not apply to glass components, filters, consumables, and other parts subject to wear and tear.

#### 1. Parts description

- |                       |                                  |
|-----------------------|----------------------------------|
| 1. Front Grill        | 11. Adjustable telescopic column |
| 2. Blade Lock Nut     | 12. Base Screws                  |
| 3. Blade              | 13. Top Base Leg                 |
| 4. Grill Lock Nut     | 14. Bottom Base Leg              |
| 5. Back Grill         | 15. Base Cover                   |
| 6. Motor              | 16. Height Adjustable Holder     |
| 7. Oscillation Button | 17. Speed Selection              |
| 8. Grill Clip         | 9. Control Panel Shaft           |
| 10. Fixed nut         |                                  |

#### 2. Safety advice and warnings!

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

#### 2.1. Use or working environment:

- 2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
- 2.1.2. Use the appliance in a well ventilated area.

2.1.3. This appliance is only for domestic use, not for

commercial use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, motels, and other types of residential environments, even in farmhouses, areas of the kitchen staff in shops, offices and other work environments.

2.1.4. Keep children and bystanders away when using this appliance.

2.1.5. Place the appliance on a horizontal, flat, stable surface and away from other heat sources and contact with water.

2.1.6. Keep the appliance away from flammable material such as textiles, curtains, cardboard, or paper, etc.

2.1.7. Do not place flammable material near the appliance.

2.1.8. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.

2.1.9. Do not use the appliance if the cable or plug is damaged.

2.1.10. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.

2.1.11. Connect the appliance to the mains power supply with an earth socket withstanding a minimum of 10 amperes.

2.1.12. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.

2.1.13. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.

2.1.14. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.

2.1.15. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.

2.1.16. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.

2.1.17. Do not wrap the power cord around the appliance.

2.1.18. Do not clip or crease the power cord.

2.1.19. Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance.

2.1.20. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.

2.1.21. The appliance is not suitable for outdoor use.

2.1.22. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.

2.1.23. Do not touch the plug with wet hands.

#### 2.2. Personal safety:

- 2.2.1. CAUTION: Do not leave the appliance unattended during use as there is a risk of an accident.
- 2.2.2. Do not touch the rotating parts of the appliance, as it may cause serious injury.
- 2.2.3. This appliance is only for domestic use, not for

commercial use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, motels, and other types of residential environments, even in farmhouses, areas of the kitchen staff in shops, offices and other work environments.

2.2.4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2.2.5. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

#### 2.3. Use and care:

- 2.3.1. Fully unroll the appliance's power cable before each use.
- 2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
- 2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply.

2.3.4. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.

2.3.5. This appliance should be stored out of reach of children.

2.3.6. Do not store the appliance if it is still hot.

2.3.7. Never leave the appliance unattended when in use and keep out of the reach of children.

2.3.8. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER TO PUT THE FIRE OUT.


2.4. Service:

- 2.4.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/ accessories.
- 2.4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
- 2.4.3. Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

2.4.4. Make sure that the fan head can swing from left to right to left, sweeping air from a

## Spanish Estimado cliente,

Gracias por elegir comprar un producto de la marca Mellerware. Gracias a su tecnología, diseño y funcionamiento y al hecho de que supera los más estrictos estándares de calidad, se puede asegurar un uso plenamente satisfactorio y una larga vida útil del producto.

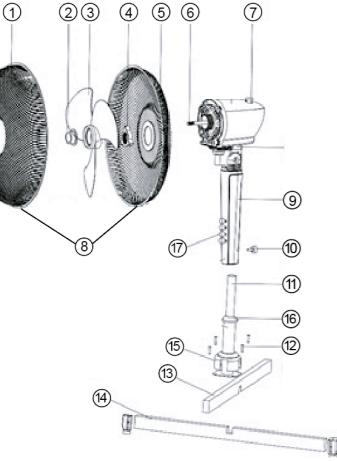

### 1. Descripción de las piezas

- |                             |                              |
|-----------------------------|------------------------------|
| 1. Parrilla delantera       | 11. Columna telescópica      |
| 2. Tuerca de bloqueo de     | ajustable                    |
| la hoja                     | 12. Tornillos de base        |
| 3. Hoja                     | 13. Pata de base superior    |
| 4. Tuerca de seguridad      | 14. Pata de la base inferior |
| para parrilla               | 15. Cubierta de la base      |
| 5. Parrilla trasera         | 16. Soporte de altura        |
| 6. Motor                    | ajustable                    |
| 7. Botón de oscilación      | 17. Selección de velocidad   |
| 8. Clip de parrilla         |                              |
| 9. Eje del panel de control |                              |
| 10. Tuerca fija             |                              |

### 2. Advertencias y advertencias de seguridad.

Lea atentamente estas instrucciones antes de encender el aparato y consérvelas para consultarlas en el futuro. No seguir y observar estas instrucciones podría provocar un accidente. Limpiar todas las partes del producto que estarán en contacto con los alimentos, como se indica en el apartado de limpieza, antes de su uso.

prendant feu, débranchez l'appareil du secteur et N'UTILISEZ PAS D'EAU POUR ÉTEINDRE LE FEU.

### 2.4. Un service:

2.4.1. Assurez-vous que l'appareil est entretenu uniquement par un technicien qualifié et que seules des pièces de rechange ou des accessoires d'origine sont utilisés pour remplacer les pièces/accessoires existants.  
2.4.2. Si le cordon d'alimentation est endommagé, le fabricant ou son agent de service ou une personne de qualification similaire doit le remplacer afin d'éviter tout danger.  
2.4.3. Toute mauvaise utilisation ou non-respect du mode d'emploi entraîne la nullité de la garantie et de la responsabilité du fabricant.

### 3. Mode d'emploi:

#### 3.1. Avant utilisation:

3.1.1. Retirez el film protecteur de l'appareil (le cas échéant).

3.1.2. Avant d'utiliser le produit pour la première fois, nettoyez-le de la manière décrite dans la section nettoyage.

#### 3.2. Assemblée:

##### 3.2.1. Ventilateur sur pied

3.2.1.1. Sortez toutes les pièces de l'appareil de l'emballage et retirez tous les matériaux d'emballage et les inserts.

3.2.1.2. Placez la jambe de la base supérieure (13) sur la jambe de la base inférieure (14).

3.2.1.3. Retirez les vis fixes (12).

3.2.1.4. Placez la colonne telescópica réglable (9) sur les pieds de la base et fixez-la avec les vis (12).

3.2.1.5. Placez d'abord le couvercle de la base (15) sur la colonne telescópique réglable (9), puis le support réglable en hauteur (9) sur la colonne (11).

3.2.1.6. Desserrez l'écrôu fixe (10) sur l'arbre du panneau de commande (9), puis placez-le sur la colonne telescópique réglable (11), serrez l'écrôu fixe (10).

3.2.1.7. Retirez le contre-écrôu de la lame (2) et le contre-écrôu du gril (4). Placez la grille arrière (5) – en vous assurant que la poignée de la grille est orientée vers le haut. Replacez le contre-écrôu du gril (4) et serrez.

3.2.1.8. Alignez la lame (3) et fixez-la avec l'écrôu de blocage de la lame (2).

3.2.1.9. Placez la grille avant (1) et fixez-la en place avec les clips de grille (8).

#### 3.3. Utilisation et entretien :

##### 3.3.1. Allumer le ventilateur :

3.3.1.1. Branchez l'appareil au secteur.

### 2.1. Entorno de uso o trabajo:

2.1.1. Mantenga el área de trabajo limpia y bien iluminada. Las áreas desordenadas y oscuras invitan a los accidentes.  
2.1.2. Utilice el aparato en un área bien ventilada.  
2.1.3. No coloque el aparato sobre superficies calientes, como placas de cocción, quemadores de gas, hornos o artículos similares.  
2.1.4. Mantenga alejados a los niños y transeúntes cuando utilice este aparato.  
2.1.5. Coloque el aparato sobre una superficie horizontal, plana y estable, alejado de otras fuentes de calor y del contacto con el agua.  
2.1.6. Mantenga el aparato alejado de materiales inflamables como textiles, cortinas, cartón o papel, etc.  
2.1.7. No coloque material inflamable cerca del aparato.  
2.1.8. No utilice el aparato junto con un programador, temporizador u otro dispositivo que lo encienda automáticamente.  
2.1.9. No utilice el aparato si el cable o el enchufe están dañados.  
2.1.10. Asegúrese de que el voltaje indicado en la etiqueta de clasificación coincida con el voltaje de la fuente de alimentación antes de enchufar el aparato.  
2.1.11. Conecte el aparato a la red eléctrica con una toma de tierra que resista un mínimo de 10 amperios.  
2.1.12. El enchufe del aparato debe encogerse correctamente en la toma de corriente. No modifique el enchufe.  
2.1.13. Si usa un enchufe múltiple, verifique las calificaciones con cuidado, ya que la corriente utilizada por varios electrodomésticos podría exceder fácilmente la calificación del enchufe múltiple.  
2.1.14. Si alguna de las carcasa del aparato se rompe, desconecte inmediatamente el aparato de la red eléctrica para evitar la posibilidad de una descarga eléctrica.  
2.1.15. No utilice el aparato si se ha caído al suelo o si hay signos visibles de daño.  
2.1.16. No fuerce el cable de alimentación. Nunca use el cable de alimentación para levantar, transportar o desenchar el aparato.  
2.1.17. No enrolle el cable de alimentación alrededor del aparato.  
2.1.18. No corte ni doble el cable de alimentación.  
2.1.19. No permita que el cable de alimentación cuelgue o entre en contacto con las superficies calientes del aparato.  
2.1.20. Verifique el estado del cable de alimentación. Los cables dañados o enredados aumentan el riesgo de descarga eléctrica.  
2.1.21. El aparato no es apto para uso en exteriores.  
2.1.22. El cable de alimentación debe examinarse periódicamente para detectar signos de daños y, si está dañado, no debe utilizarse el aparato.

2.3. Uso y cuidado:  
2.3.1. Desenrolle completamente el cable de alimentación del aparato antes de cada uso.  
2.3.2. No utilice el aparato si las piezas o los accesorios no están instalados correctamente.  
2.3.3. No de la vuelta al aparato mientras esté en uso o conectado a la red eléctrica.  
2.3.4. Desenchufe el aparato de la red eléctrica cuando no esté en uso y antes de realizar cualquier tarea de limpieza.  
2.3.5. Coloque el aparato fuera del alcance de los niños.  
2.3.6. No guarde el aparato si todavía está caliente.  
2.3.7. Nunca deje el aparato desatendido cuando esté en uso y manténgalo fuera del alcance de los niños.  
2.3.8. Si por alguna razón el aparato se incendia, desenchufelo de la red eléctrica y NO USE AGUA PARA APAGAR EL FUEGO.

2.4. Servicio:  
2.4.1. Asegúrese de que el electrodoméstico sea reparado únicamente por un técnico debidamente calificado y que de solo se utilicen piezas de repuesto o accesorios originales para reemplazar las piezas / accesorios existentes.

2.4.2. Verifique el estado del cable de alimentación. Los cables dañados o enredados aumentan el riesgo de descarga eléctrica.

2.4.3. Si el cable de alimentación está dañado, el fabricante o su agente de servicio o una persona igualmente calificada debe reemplazarlo para evitar un peligro.

2.4.4. Cualquier mal uso o incumplimiento de las instrucciones de uso anula la garantía y la responsabilidad del fabricante.

3.3.1.2. Seleccione el débito d'air souhaité à l'aide des boutons (17):  
0. Arrêter le ventilateur  
1. Basse vitesse  
2. Vitesse moyenne  
3. Haute vitesse

#### 3.3.2. Balancement et inclinaison

3.3.2.1. La tête du ventilateur peut pivoter de gauche à droite et à gauche, balayant l'air d'une certaine zone. Pour ce faire, appuyez simplement sur le bouton d'oscillation (7).

#### 3.4. Une fois que vous avez terminé l'utilisation de l'appareil:

3.4.1. Laissez la pale du ventilateur s'arrêter complètement.

3.4.2. Débranchez l'appareil du secteur.

3.4.3. Nettoyez l'appareil comme décrit dans la section nettoyage.

#### 4. Nettoyage

4.1. Débranchez l'appareil du secteur et laissez-le refroidir completamente avant d'entreprendre toute tâche de nettoyage.

4.2. Retirez la grille avant afin de nettoyer l'hélice. Lorsque vous retirez la grille avant pour nettoyer l'hélice, assurez-vous que le ventilateur est débranché avant de retirer la protection.

4.3. Nettoyez les parties extérieures de l'appareil avec un chiffon humide avec quelques gouttes de liquide vaisselle puis séchez. MISE EN GARDE! Ne plongez pas les parties électriques de l'appareil dans un liquide.

4.4. N'utilisez pas de solvants, ni de produits à pH acide ou basique tels que l'eau de Javel ou des produits abrasifs, pour nettoyer l'appareil.

4.5. Ne plongez jamais l'appareil dans l'eau ou tout autre liquide et ne le placez jamais sous l'eau courante.

#### 5. Anomalies et réparation

5.1. Apportez l'appareil à un centre d'assistance agréé si el producto est endommagé ou si d'autres problèmes surviennent.

5.2. Si la conexión al sector a été endommagada, elle doit être remplacée et vous devez proceder comme vous le feriez en cas de dommages.

#### 6. Recyclage

6.1. Ces produits eléctricos, cables, baterías, embalajes y el manual no deben pas être mezclados con los desechos ménageros generales. Para un reciclaje correcto, veaule apportar ces produits au bureau Creative Housewares le plus proche où ils seront acceptés pour reciclaje gratuitamente.

#### 3.3. Utilisation et entretien :

##### 3.3.1. Allumer le ventilateur :

3.3.1.1. Branchez l'appareil au secteur.

### 2.1.23. No toque el enchufe con las manos mojadas.

#### 2.2. Seguridad personal:

2.2.1. PRECAUCIÓN: No deje el aparato desatendido durante su uso, ya que existe el riesgo de un accidente.  
2.2.2. No toque las partes giratorias del aparato, ya que puede causar lesiones graves.  
2.2.3. Este aparato es solo para uso doméstico, no para uso industrial o profesional. No está destinado a ser utilizado por huéspedes en entornos de hostelería como bed and breakfast, hoteles, moteles y otros tipos de entornos residenciales, incluso en granjas, áreas del personal de cocina en tiendas, oficinas y otros entornos de trabajo.  
2.2.4. Este electrodoméstico no está diseñado para ser utilizado por personas (incluidos niños) con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimiento, a menos que hayan recibido supervisión o instrucciones sobre el uso del electrodoméstico por una persona responsable de su seguridad.  
2.2.5. Este aparato no es un juguete. Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.

#### 2.3. Uso y cuidado:

2.3.1. Saque todas las piezas del aparato del embalaje y retire todos los materiales de embalaje e inserciones.  
2.3.2. Coloque la Pata de la Base Superior (13) a través de la Pata de la Base Inferior (14).  
2.3.3. Retirar los tornillos fijos (12).  
2.3.4. Coloque la columna telescópica ajustable (9) en las patas de la base y asegúrela con los tornillos (12).  
2.3.5. Primero coloque la Cubierta de la Base (15) sobre la Columna Telescópica Ajustable (9) y luego el Soporte Ajustable en Altura (9) sobre la columna (11).  
2.3.6. Afloje la Tuerca Fija (10) en el Eje del Panel de Control (9) y luego colóquela en la Columna Telescópica Ajustable (11), apriete la Tuerca Fija (10).  
2.3.7. Retire la contrapuerta de la hoja (2) y la contrapuerta de la parrilla (4). Coloque la parrilla trasera (5) sobre la Columna Telescópica Ajustable (9) y luego el Soporte Ajustable en Altura (9) sobre la columna (11).  
2.3.8. Alinee la hoja (3) y asegúrela con la contrapuerta de la hoja (2).  
2.3.9. Coloque la parrilla delantera (1) y asegúrela en su lugar con las pinzas para parrilla (8).

#### 3.3. Usos y cuidados:

3.3.1.1. Conecte el aparato a la red.  
3.3.1.2. Seleccione el flujo de aire requerido con los botones (17):

#### 4.4. Servicio:

4.4.1. Asegúrese de que el electrodoméstico sea reparado únicamente por un técnico debidamente calificado y que solo se utilicen piezas de repuesto o accesorios originales para reemplazar las piezas / accesorios existentes.

4.4.2. Verifique el estado del cable de alimentación. Los cables dañados o enredados aumentan el riesgo de descarga eléctrica.

4.4.3. Si el cable de alimentación está dañado, el fabricante o su agente de servicio o una persona igualmente calificada debe reemplazarlo para evitar un peligro.

4.4.4. Cualquier mal uso o incumplimiento de las instrucciones de uso anula la garantía y la responsabilidad del fabricante.

#### 2.2. Conselhos e avisos de segurança!

2.2.1. Lleve el aparato a un centro de soporte autorizado si el producto está dañado o si surgen otros problemas.  
2.2.2. Si la conexión a la red se ha dañado, debe ser reemplazada y debe proceder como lo haría en caso de daños.

#### 3.3.2. Balanceo e Inclinación

3.3.2.1. El cabezal del ventilador puede oscilar de izquierda a derecha a izquierda, barriendo el aire de un área determinada. Para hacerlo, simplemente presione el botón de oscilación (7).

#### 2.2. Conselhos e avisos de segurança!

2.2.1.1. Eléctrico. Lea estas instrucciones cuidadosamente antes de ligar o apagar el aparato y guarde-as para referencia futura. O não cumprimento das instruções pode causar um acidente. Limpe todas as partes do produto que entrarão em contato com os alimentos, conforme indicado na seção de limpeza, antes do uso.

2.2.1.2. O aparelho não é adequado para uso ao ar livre.

2.2.1.3. O cabo de alimentação deve ser examinado regularmente quanto a sinais de danos e, se o cabo estiver danificado, o aparelho não deve ser usado.

2.2.1.4. Não toque no plugue com as mãos molhadas.

#### 2.2. Utilização ou ambiente de trabalho:

2.2.1. Mantenha a área de trabalho limpia e bem iluminada. Áreas desordenadas e escuras são um convite a acidentes.

2.2.2. Use o aparelho em uma área bem ventilada.

2.2.3. Não coloque o aparelho sobre superfícies quentes, como placas de cozinha, queimadores a gás, fornos ou itens semelhantes.

2.2.4. Mantenha crianças e espectadores afastados quando usar este aparelho.

2.2.5. Coloque o aparelho sobre uma superfície horizontal, plana e estável, longe de outras fontes de calor e do contato com água.

2.2.6. Mantenha o aparelho longe de materiais inflamáveis, como tecidos, cortinas, papelão ou papel, etc.

2.2.7. Não coloque materiais inflamáveis perto do aparelho.

2.2.8. Não use o aparelho em associação com um programador, cronômetro ou outro dispositivo que o liga automaticamente.

2.2.9. Não utilize o aparelho se o cabo ou a ficha estiverem danificados.

2.2.10. Certifique-se de que a voltagem indicada na etiqueta de clasificación corresponde à voltagem da fonte de alimentación antes de conectar el aparato.