

REGISTER YOUR MELLERWARE WARRANTY

You thank for purchasing a Mellerware product. Mellerware guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical or electrical defects and complies with the applicable safety standards. With every Mellerware product purchased you will receive up to a 3 year warranty as detailed in the terms and conditions below.

SECOND YEAR – 1 YEAR RETAIL WARRANTY

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement at the discretion of the brand. Mellerware appliances are intended for domestic use only and not for industrial or professional use. The warranty, if the product is used outside of domestic use or used in a commercial environment, is reduced to 3 months with no extended warranty available, all other terms and conditions applicable.

SECOND YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED ONLINE WARRANTY REGISTRATION

Mellerware takes pride in its product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 24 months from the original date of purchase, please return to Mellerware for repair. Mellerware will assess and replace the product free of charge should it be found to be faulty. Please retain your receipt as proof of purchase. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

THIRD YEAR – OPTIONAL 1 YEAR ADDITIONAL EXTENDED COMMUNICATION OPT IN WARRANTY

Mellerware takes pride in its product quality and therefore offer an additional 12 month warranty over and above the 1 Year Retail and 1 year online registration warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the initial 12 month period and within 36 months from the original date of purchase, please return the product to Mellerware for repair. Mellerware will assess and repair the product free of charge should it be found to be faulty. Please retain your receipt as proof of purchase. Mellerware will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason. Should the product fall outside of the warranty, Mellerware will produce a repair and delivery quotation for your approval.

NB: Registration should be completed at www.creativehousewares.co.za. Should you experience any technical difficulties you are welcome to contact our customer service line on 086 111 5006 and one of our consultants will gladly assist with the online warranty registration. Should you not register the product within the 12 months of purchase, you will automatically forfeit this extended warranty.

FOR FURTHER INFORMATION PLEASE REFER TO THE MELLERWARE WEBSITE

For any service, enquiries and complaints, please contact our Customer Care on 086 111 5006, e-mail help@chwsa.co.za or WhatsApp on +27 63 014 0457 from 08h00 to 15h00 Monday to Friday excluding public holidays.

Please also note that the company is normally closed for 2 weeks around Christmas and New Year.

Please send all products to one of the listed service centres.

ONLINE WARRANTY REGISTRATION

WHY REGISTER YOUR WARRANTY?

Mellerware pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer up to a 3 year warranty (1 Year Retail + 1 Year Extended Online warranty registration + 1 Year Extended opt-in communication warranty) on all of our products. To take advantage of the Free Extended Warranty options you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online and never have to worry about losing your receipt again. Enjoy the benefit of up to 3 years warranty.

ADDED BENEFITS

In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:

- Discount voucher on product warranty registration
- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments - be the first to get the latest appliances
- Special offers on promotional items

How to Register your Online Warranty?



DESKTOP/
LAPTOP



SMART PHONE/
TABLET

- Open your internet browser and visit www.mellerware.co.za
- Click on the "Register" link and create your username and password. Or if you have done this already login with your username and password.
- Click on "Register your Warranty" and follow the easy instructions.
- Scan and upload your receipt.

Notes:

1. The online warranty system is a safe storage facility for your receipt.
2. You will be required to register on the Mellerware or Creative Housewares website. You will receive a username and password once registered. This will give you access to your profile.
3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to scan and upload your receipt to us.
4. All instructions on how to load your products are available inside your profile.
5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.
6. For assistance with registration please email: help@chwsa.co.za

National Service Centre: 086 111 5006
e-mail: help@chwsa.co.za
www.creativehousewares.co.za

Durban

243 Percy Osborn Road
Morningside, Durban, 4001, RSA

+27 31 303 3465

creative housewares

20 Tekstiel Street, Parow, Cape Town, 7493, RSA
PO Box 6156, Parow East, 7501, RSA
+27 21 931 8117 | +27 63 014 0457

+27 86 111 5006 | www.creativehousewares.co.za


+27 11 392 5652



English

Dear customer,

Thank you for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

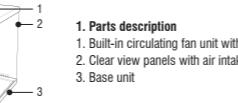

1. Parts description

1. Built-in circulating fan unit with light fitting
2. Clear view panels with air intake
3. Base unit

2. Safety advice and warnings!

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

2.1. Use or working environment:

2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.

2.1.2. Use the appliance in a well ventilated area.

2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.

2.1.4. Keep children and bystanders away when using this appliance.

2.1.5. Place the appliance on a horizontal, flat, stable surface and away from other heat sources and contact with water.

2.1.6. Keep the appliance away from flammable material such as textiles, curtains, cardboard or paper, etc.

2.1.7. Do not place flammable material near the appliance.

2.1.8. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.

2.1.9. Do not use the appliance if the cable or plug is damaged.

2.1.10. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.

2.1.11. Connect the appliance to the mains power supply with an earth socket notwithstanding a minimum of 10 Amperes.

2.1.12. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.

2.1.13. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.

2.1.14. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.

2.1.15. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.

2.1.16. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.

2.1.17. Do not wrap the power cord around the appliance.

2.1.18. Do not clip or crease the power cord.

2.1.19. Do not allow the power cord to hang or to come into contact with hot surfaces.

2.1.20. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.

2.1.21. The appliance is not suitable for outdoor use.

2.1.22. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.

2.1.23. Do not touch the plug with wet hands.

2.2. Personal safety:

2.2.1. CAUTION: Do not leave the appliance unattended during use as there is a risk of an accident.

2.2.2. Do not touch the rotating parts of the appliance, as it may cause

2.3. Use and care:

2.3.1. Fully unroll the appliance's power cable before each use.
2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.
2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply.
2.3.4. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.
2.3.5. This appliance should be stored out of reach of children.
2.3.6. Keep the meat to the meat dry. NOTE: The exact number of days required will depend on your recipe, size of your cuts, the type of meat used and personal taste.
2.3.7. If for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and DO NOT USE WATER TO PUT THE FIRE OUT.

2.4. Service:


2.4.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/accessories.
2.4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
2.4.3. Any misuse or failure to follow the instructions for users renders the guarantee and the manufacturer's liability null and void.
2.4.4. Once the bottom shelf is full you can place the next shelf in the appliance and repeat the process.
2.4.5. Once the fruit has been placed in the appliance you may place the lid on top and then insert the plug into the wall socket.

3. Instructions for use

3.1. Before use:

3.1.1. Remove the appliance's protective film(if applicable).
3.1.2. Before using the product for the first time, clean in the manner described in the cleaning section.

3.2. Assembly:

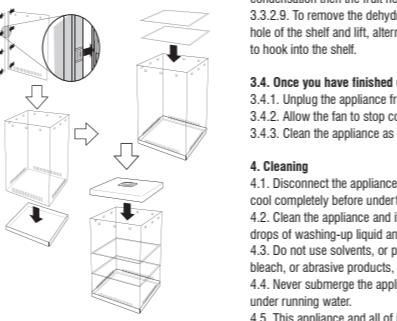

Step 1:

4. Cleaning

4.1. Disconnect the appliance from the mains power supply and allow it to cool completely before undertaking any cleaning task.
4.2. Clean the appliance and its accessories with a damp cloth and a few drops of washing-up liquid and then dry thoroughly.
4.3. Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
4.4. Never submerge the appliance in water or any other liquid or place it under running water.
4.5. This appliance and all of its accessories are not dishwasher safe.

4. Once you have finished using the appliance:

4.1.1. Unplug the appliance from the mains power supply.
4.1.2. Allow the fan to stop completely before removing the cover.
4.1.3. Clean the appliance as described in the cleaning section.

5. Anomalies and repair

5.1.1. Make sure that the meat is best suited for hanging thinly sliced strips of meat for best results. The thicker the meat, the longer it takes to dry. Aim for slices of anything up to 1-2cm thick and 20cm in length/Too many short pieces may have you running out of space with the deeper part of the meat not being fully utilised). Slice the meat with the grain and use a very sharp carving knife for the best results. Try to remove excess fat as this will help with the drying process. Use a maximum of 3kg of meat at any time.
5.1.2. Remove the meat from the appliance and let it cool completely. Then slice the meat into thin strips, about 4-5 cm wide and 17cm thick, with the natural grain of the meat.
5.1.3. Mix all dry spices together.
5.1.4. Roll meat in the mixed dry spices in a CLEAN bowl.
5.1.5. Allow meat to draw in its own brine for 3 hours (thicker pieces to be longer).
5.1.6. Remove meat and put back into vinegar mix for +/- 10 minutes.
5.1.7. Remove again and wipe meat with same vinegar to make SALT sticks to the meat.
5.1.8. Squeeze meat with your hand to get rid of as much liquid as possible.
5.1.9. Hang meat until ready.

6. Drying Sausage:

Various sausages you buy at your butcher or in the shop (you could even make your own!) are suitable for drying and you can experiment to get your desired results. Just remember to use the thinner variety for quicker results. Mutton sausage is usually not well suited for drying.

7. Mould:

Biltong, especially the "wettish" type, can be affected by mould whether it has been purchased or home-made and not consumed within a couple of days. Mould is more likely to occur when making Biltong during hot and humid summer periods especially at coastal areas. Although the "Biltong Making Season" is usually in the winter months, it can be made all year round in your Biltong Maker provided it is situated in a cool and dry environment.

8. Cleaning

4.1. Disconnect the appliance from the mains power supply and allow it to cool completely before undertaking any cleaning task.
4.2. Clean the appliance and its accessories with a damp cloth and a few drops of washing-up liquid and then dry thoroughly.
4.3. Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
4.4. Never submerge the appliance in water or any other liquid or place it under running water.
4.5. This appliance and all of its accessories are not dishwasher safe.

9. Anomalies and repair

5.1.1. Make sure that the meat is best suited for hanging thinly sliced strips of meat for best results. The thicker the meat, the longer it takes to dry. Aim for slices of anything up to 1-2cm thick and 20cm in length/Too many short pieces may have you running out of space with the deeper part of the meat not being fully utilised). Slice the meat with the grain and use a very sharp carving knife for the best results. Try to remove excess fat as this will help with the drying process. Use a maximum of 3kg of meat at any time.
5.1.2. Remove the meat from the appliance and let it cool completely. Then slice the meat into thin strips, about 4-5 cm wide and 17cm thick, with the natural grain of the meat.
5.1.3. Mix all dry spices together.
5.1.4. Roll meat in the mixed dry spices in a CLEAN bowl.
5.1.5. Allow meat to draw in its own brine for 3 hours (thicker pieces to be longer).
5.1.6. Remove meat and put back into vinegar mix for +/- 10 minutes.
5.1.7. Remove again and wipe meat with same vinegar to make SALT sticks to the meat.
5.1.8. Squeeze meat with your hand to get rid of as much liquid as possible.
5.1.9. Hang meat until ready.

10. Drying the meat:

Cure the meat and slice it into thin strips. Spread the meat on the dehydrator shelves in a single layer. All fruit should be cleaned before use and all seeds removed. As with meat a certain amount of experimentation is necessary in order to learn how best to prepare the fruit for your taste.

11. Slicing the meat:

Core and slice the apples. It is best to soak apples in a lime and water solution, alternately you could steam them for a couple of minutes before dehydrating. You could also sprinkle cinnamon onto the apples before placing them into the dehydrator. Apples should be cut into thin, even slices for best results.

12. Bananas:

Bananas should be soaked in a lime and water solution for best results. They should be sliced thinly, between 4 and 8mm.

Sien onderstaande resepte.

Die vleis ophang:

Volg die volgende stappe om 'n vrye lugluik te skep vir vinniger droog en om die moeilikhoud van vorm te voorkom:

- Hang altyd die vleis met die dikste deel na bo.
- Moenie dat enige van die vleis aan die kantie van die masjien raak nie.
- Sit altyd die deksel op nadat die vleis opghang is om te verhoed dat insete sou vlieë nie.

Droë wors:

Verkele wortels was jy by jou slaghuis of in die winkel koop (jy kan selfs jou eie maak) is geskik om te droog en kan eksperimenteer om die gewenste resultate te kry. Onthou net om die dunner verskeidenheid te gebruik vir vinniger resultate. Skaapwors is gewoonlik nie goed geskik om te droog nie.

Skimmel:

Biltong, veral die "natagtige" type, kan deur skimmel aangesas word, of dit nou gekoep of tuisgemaak is nie binne 'n paar dae vteeer word nie. Skimmel is meer geneig om te voorkom wanneer Biltong gemaak word tydens warm en vogtige somerperiodes veral by kusgebiede. Alhoewel die "Biltong Making Season" gewoonlik in die wintermaande is, kan dit regdeur die jaar in jou Biltong Maker gemaak word mits dit 'n koel en droog omgewing geleë is.

In die somermaande probeer om die stukke dunner te sny sodat hulle vinner kan droog word. Moet nooit die vleis droog in 'n kamer beïnvloed word, hoek nie. Hoe varier die lug en hoe beter die ventilaasie is, hoe minder gevare daar dat vorm sal voorkom. Die meeste mens gebruik Biltong Makers in hul koumbole. Wees ergers versigig as jy 'n kompakte kombuisie het, want stoom van kookpotte, ketels en die opwas sou humideit.

Die is meer geneig om vorm te vorm op voorverpakte vleis, veral wors (wors) wat al 'n aantal dae op die koue rak van 'n winkel is. Pas op die bloedrigheid waarin die vleis is "tacky" geword het wannekter jy dit oopmaak, want dit is 'n vorstinstimulans. Vee dit deelgeel al met 'n lap wat in asyn gewees is voordat u met enige verdere voorbereiding voortgaan.

6.2. Vrugte:

Watter vrugt jy ook al besluit om te gebruik, maak seker dat dit in klein genoeg stukkies gesny word sodat dit kan droog word. Maak ook seker dat die rakkie nie noorval is nie in dat dit op die droograkke nie almal deur die vrugte kan droog nie. Maak ook seker dat daar genoeg lugluik is sodat die vrugte kan droog word. Sny die vrugte in klein, ewe groot stoom in verspil dat in 'n enkele laag of die droograak. Alle vrugte moet skoongemaak word vir gebruik om alle ptili verwyder word. Soos met vleis is 'n sekere mate van eksperimentering nodig om te leer hoe om die vrugte die beste vir jou smaak voor te berei.

Appels
Ontkern en sny die appels in skwyte. Dit is die beste om appels in 'n lemme- en wateroplossing te week, alternatiewelik kan jy 'n paar minste lank stoom voordat dit ontwater. Jay kan ook kandie op die appels sprinkel voordat jy dit in die dehidratator plaas. Appels moet in dun, egale skwyte gesny word vir die beste resultate.

Piesangs
Piesangs moet in 'n kalk-en-wateroplossing gewek word vir die beste resultate. Hulle moet dun gesny word, tussen 4 en 8 mm.

Arbeie
Sny in eweredige skwyte. Vir arbeie is voorbehandeling nie nodig nie.

Mango's
Verwyder die vel en probeer om groot stukke van die pit weg te sny. Sny die stukke in 3 mm dik skwyte. Sprei die stukkies mango op die dehidratator rak in 'n enkele laag. Dit kan tot drie dae neem om 'n mango te dehidrateer.

3.3.1.4. Laissez la viande sécher. NOTE: Le nombre exact de jours requis sera dépendre de votre recette, de la taille de vos coupures, du type de la viande utilisée et du goût personnel.

5. Ne pas accrocher plus de 3 kg de viande à un temps.

3.3.2. Fruits:

Assurez-vous que l'appareil est propre avant utilisation.

3.3.2.2. Ne pas sécher la viande et les fruits en même temps.

3.3.2.3. Placez l'étagère inférieure en premier puis placez le fruit Pièces sur l'étagère. Tenez-le répartir uniformément sur l'étagère et assurez-vous que toutes les pièces sont identiques Taille.

3.3.2.4. Une fois que l'étagère inférieure est pleine, vous pouvez placer la l'étagère suivante dans l'appareil et répétez le processus.

3.3.2.5. Une fois que le fruit a été placé dans l'appareil Vous pouvez placer le couvercle sur le dessus, puis insérer la Brancher la prise murale.

3.3.2.6. La déshydratation des fruits peut prendre n'importe qui entre 8 et 36 heures.

3.3.2.7. Pour vérifier si le fruit est prêt, retirez une pièce et Serrez-le, s'il y a de l'humidité, vous avez besoin Pour continuer le processus de séchage.

3.3.2.8. Si vous n'êtes pas sûr, vous pouvez également réaliser une seule pièce. Et placez-le dans un pot en verre ou en plastique transparent Sac et sceau. Si après quelques minutes il y a Densité alors le fruit doit être déshydraté pour longtemps.

3.3.2.9. Pour retirer les tablettes de déshydratation, raccrochez-vous à votre Doigt dans le trou central de l'étagère et le levage. Alternativement, vous pouvez utiliser les crochets de séchage de viande Pour s'accrocher à l'étagère.

3.4. Une fois que vous avez terminé l'utilisation de l'appareil:

3.4.1. Débranchez l'appareil de l'alimentation secteur la fourniture.

3.4.2. Laissez le ventilateur s'arrêter complètement avant de l'enlever – La couverture.

3.4.3. Nettoyez l'appareil comme décrit dans le nettoyage section.

4. Nettoyage

4.1. Débranchez l'appareil du secteur Fournir et lui permettre de refroidir complètement avant d'entreprendre Toute tâche de nettoyage.

4.2. Nettoyez l'appareil et ses accessoires avec un chiffon humide et quelques gouttes de liquide vaisselle et Puis sécher complètement

4.3. N'utilisez pas de solvants ou de produits avec un acide Ou le ph de base tel que l'eau de javel, ou les produits abrasifs, pour Nettoyer l'appareil.

4.4. Ne jamais immerger l'appareil dans de l'eau ou aucun Autre liquide ou pliez-le sous l'eau courante.

4.5. Cet appareil et tous ses accessoires ne sont pas lave-vaisselle.

5. Anomalies et réparation

5.1. Prenez l'appareil dans un centre de support autorisé Si le produit est endommagé ou d'autres problèmes apparaissent.

5.2. Si la connexion au secteur a été endommagée, Il doit être remplacé et vous devriez procéder comme vous Seraït en cas de dommage.

6. Conseils et recommandations:

6.1. Mai : Sélection de la viande:

Biltong peut être fabriqué à partir de pratiquement n'importe quelle viande ou Vlaande, mais rappellez-vous - mieux c'est la coupe et la qualité De la viande, mieux vaut le Biltong. Topside ou Silverside est parfait. Choisissez la viande selon vos préférences (et disponibilité). Gardez à l'esprit que les viandes grasses sont plus susceptibles de Gâter pendant le séchage.


Bananes
Les bananes doivent être trempées dans une solution de citron et de citron Pour de meilleurs résultats. Ils doivent être tranches légèrement, entre 4 et 8mm.

Mangos
Retirez la peau et essayez de couper les gros morceaux Du pip. Coupez

Spanish

Estimado cliente,

Gracias por elegir comprar un Mellerware Marca producto. Gracias a su tecnología, diseño y Funcionamiento y el hecho de que supera la más estrada Un uso plenamente satisfactorio y un producto largo La vida puede estar asegurada.

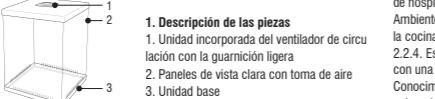

1. Descripción de las piezas

1. Unidad incorporada del ventilador de circulación con la guarnición ligera

2. Paneles de vista clara con toma de aire

3. Unidad base

2. Consejos y advertencias de seguridad!

Lea atentamente estas instrucciones antes de encender El aparato y guardélos para futuras consultas. Fallar- Seguir y observar estas instrucciones podría conducir A un accidente. Limpie todas las partes del producto que Estarán en contacto con los alimentos, como se indica en la Antes del uso.

2.1. Uso o ambiente de trabajo:

2.1.1. Mantenga el área de trabajo limpia y bien iluminada. Las áreas desordenadas y oscuras invitan a los accidentes.

2.1.2. Utilice el aparato en un lugar bien ventilado.

2.1.3. No coloque el aparato sobre superficies calientes. Como placas de cocina, quemadores de gas, hornos o artículos similares.

2.1.4. Mantenga alejados a los niños y rascunantes cuando use Este aparato.

2.1.5. Coloque el aparato sobre una superficie horizontal, plana, estable Superficies y lejos de otras fuentes de calor y con agua.

2.1.6. Mantenga el aparato lejos de materiales inflamables. Como tejidos, cortinas, cartón o papel, etc.

2.1.7. No coloque material inflamable cerca de la Ance

2.1.8. No utilice el aparato en combinación con un Programador, temporizador u otra dispositivo que La Encienda.

2.1.9. No utilice el aparato si el cable o el enchufe dañado.

2.1.10. Asegúrese de que el voltaje indicado en la Etiqueta de la fuente de alimentación antes de Encender el aparato.

2.1.11. Conecte el aparato a la red eléctrica Con una toma de tierra soporando un mínimo de 10 Amperios.

2.1.12. El enchufe del aparato debe encrabear en la red Correctamente. No altere el enchufe.

2.1.13. Asegúrese de que el voltaje indicado en la Etiqueta de la fuente de alimentación antes de Encender el aparato.

2.1.14. Si se rompe alguna de las cubiertas del aparato, Desconecte el aparato a la red eléctrica Para evitar la posibilidad de una descarga eléctrica.

2.1.15. No utilice el aparato si se ha caído sobre el O si hay signos visibles de daños.

2.1.16. No fuerce el cable de alimentación. Nunca use el El cable de alimentación para levantar, transportar o desenchar el aparato.

2.1.17. No envuelva el cable eléctrico alrededor de la Ance

2.1.18. No sujete ni pliegue el cable de alimentación.

2.1.19. No permita que el cable de alimentación Entrar en contacto con superficies calientes.

2.1.20. Compruebe el estado del cable de alimentación. Dañado Los cables enredados aumentan el riesgo de descarga eléctrica.

2.1.21. El aparato no es adecuado para uso en exteriores.

2.1.22. El cable de alimentación debe examinarse Signos de daño, y si el cable está dañado, No debe utilizarse.

2.1.23. No toque el enchufe con las manos mojadas.

3.3.1.4. Laissez la viande sécher. NOTE: Le nombre exact de jours requis sera dépendre de votre recette, de la taille de vos coupures, du type de la viande utilisée et du goût personnel.

5. Ne pas accrocher plus de 3 kg de viande à un temps.

3.3.2. Fruits:

Asegurez-vous que l'appareil est propre avant utilisation.

3.3.2.2. Ne pas sécher la viande et les fruits en même temps.

3.3.2.3. Placez l'étagère inférieure en premier puis placez le fruit Pièces sur l'étagère. Tenez-le répartir uniformément sur l'étagère et assurez-vous que toutes les pièces sont identiques Taille.

3.3.2.4. Une fois que l'étagère inférieure est pleine, vous pouvez placer la l'étagère suivante dans l'appareil et répétez le processus.

3.3.2.5. Une fois que le fruit a été placé dans l'appareil Vous pouvez placer le couvercle sur le dessus, puis insérer la Brancher la prise murale.

3.3.2.6. La déshydratation des fruits peut prendre n'importe qui entre 8 et 36 heures.

3.3.2.7. Pour vérifier si le fruit est prêt, retirez une pièce et Serrez-le, s'il y a de l'humidité, vous avez besoin Pour continuer le processus de séchage.

3.3.2.8. Si vous n'êtes pas sûr, vous pouvez également réaliser une seule pièce. Et placez-le dans un pot en verre ou en plastique transparent Sac et sceau. Si après quelques minutes il y a Densité alors le fruit doit être déshydraté pour longtemps.

3.3.2.9. Pour retirer les tablettes de déshydratation, raccrochez-vous à votre Doigt dans le trou central de l'étagère et le levage. Alternativement, vous pouvez utiliser les crochets de séchage de viande Pour s'accrocher à l'étagère.

3.4. Une fois que vous avez terminé l'utilisation de l'appareil:

3.4.1. Débranchez l'appareil de l'alimentation secteur la fourniture.

3.4.2. Laissez le ventilateur s'arrêter complètement avant de l'enlever – La couverture.

3.4.3. Nettoyez l'appareil comme décrit dans le nettoyage section.

4. Nettoyage

4.1. Débranchez l'appareil du secteur Fournir et lui permettre de refroidir complètement avant d'entreprendre Toute tâche de nettoyage.

4.2. Nettoyez l'appareil et ses accessoires avec un chiffon humide et quelques gouttes de liquide vaisselle et Puis sécher complètement

4.3. N'utilisez pas de solvants ou de produits avec un acide Ou le ph de base tel que l'eau de javel, ou les produits abrasifs, pour Nettoyer l'appareil.

4.4. Ne jamais immerger l'appareil dans de l'eau ou aucun Autre liquide ou pliez-le sous l'eau courante.

4.5. Cet appareil et tous ses accessoires ne sont pas lave-vaisselle.

5. Conseils y recomendaciones:

6.1. Mai : Selección de la carne:

Biltong puede ser fabricado a partir de prácticamente n'importe quelle carne o carne, mejor c' es la corte y la calidad De la carne, mejor vaut le Biltong. Topside o Silverside est perfecto. Choisissez la carne según sus preferencias (y disponibilidad). Gardez a l'esprit que las carnes grasas son más susceptibles de Gâter durante el proceso de secado.

Piñas
Corrigez y corte las piñas. Es preferible tenerlas en una solución de zumo de limón y de zumo de limón. Cepéndant, prenez soin de disponer de un kitchenette compacte.

Comme la vapor de los platos de cocina, los hornillos y el lavavajillas.

2.1.1. Mantenga la carne de trabajo limpia y bien iluminada. Clut- Áreas irregulares y convidaciones adicione.

2.1.2. Use el aparato en una área bien ventilada.

2.1.3. No coloque el aparato en superficies gruesas, tales como Como platos de cocina, hornillos,